

- (1) AXLE PINCH BOLTS
- (2) AXLE
- (3) SIDE COLLAR

## Front Wheel

### Removal

Remove the brake caliper mounting bolts and disc cover. Loosen the axle pinch bolts.

Support the motorcycle and front wheel off the ground. Remove the axle, left side collar and front wheel.


Do not depress the brake lever after the front wheel is removed. The caliper pistons will move and make reassembly difficult.

### Disassembly/Assembly

#### ⚠ WARNING

**A contaminated brake disc or pad reduces stopping power, and can cause a serious injury or death.**

**Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.**

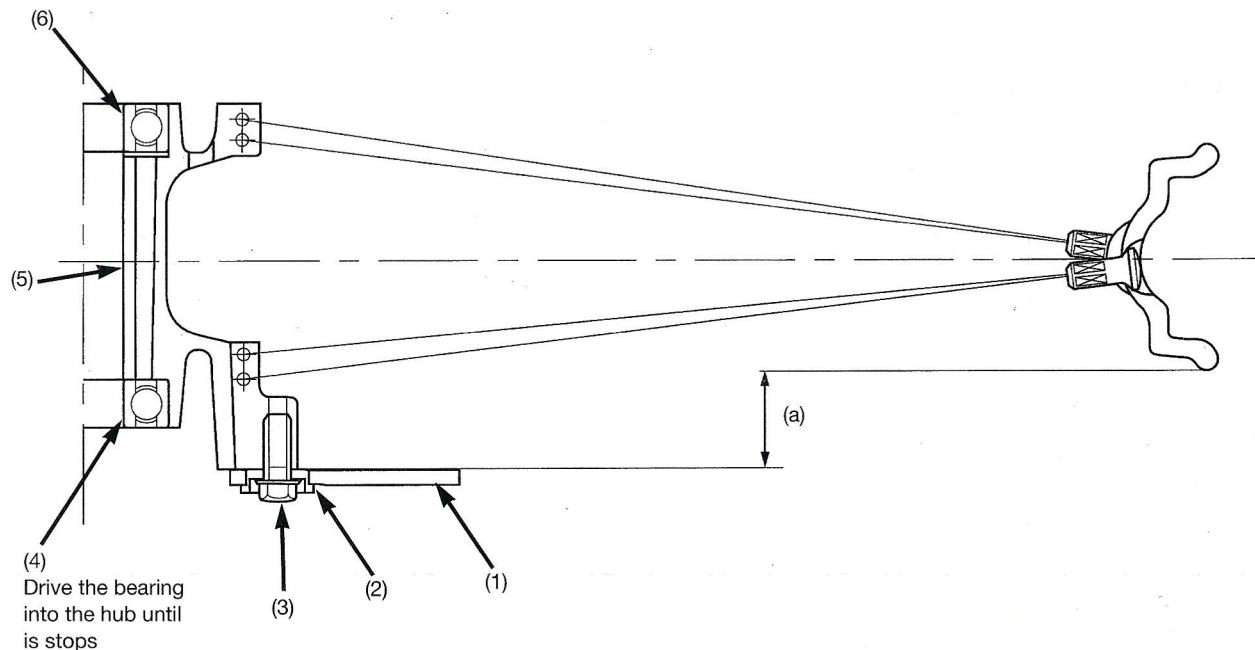

- (1) BRAKE DISC
- (2) COLLAR
- (3) DISC BOLT
- (4) LEFT WHEEL BEARING
- (5) DISTANCE COLLAR
- (6) RIGHT WHEEL BEARING

(a)  $25 \pm 0.5$  mm

